


ECONOMY FIXTURE CHAIN ATTACHMENT INSTRUCTIONS

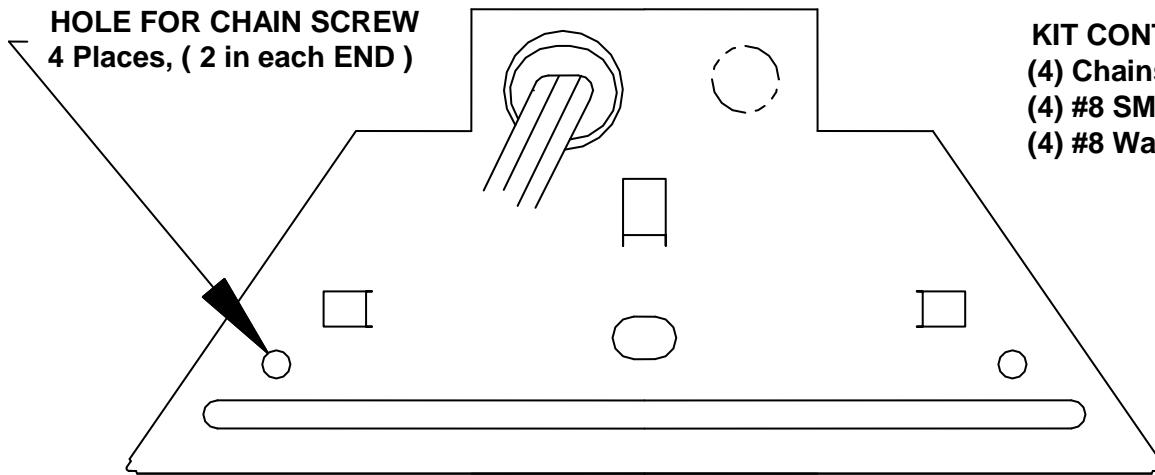

KIT CONTENTS:

- (4) Chains
- (4) #8 SM screws, 3/8" long
- (4) #8 Washer type lock nuts.


1. Put **SCREW** thru one end of **CHAIN**.
2. Insert **SCREW** thru hole in **FIXTURE END**.
3. Place **NUT** on **SCREW** on inside of fixture.
4. Position chain to be pointing **UP**.
5. Tighten **NUT**.
6. Repeat 1 thru 5 for each **CHAIN**.

LAMP INSTALLATION

1. Install lamps by sliding pins fully into sockets, and twisting a quarter turn, in either direction, to lock.
2. With **Fixture** right side up, adjust to desired height.
3. **ENJOY! GROW! GROW! GROW!**

How to be certain lamp is seated properly:

- 1) Each bipin lamp base has 2 small indentations - *guide creases* - 90° from each pin.
- 2) When the lamp is in the socket correctly, with the pins firmly seated in the spring clips, one guide crease will be visible centered directly in the socket opening.

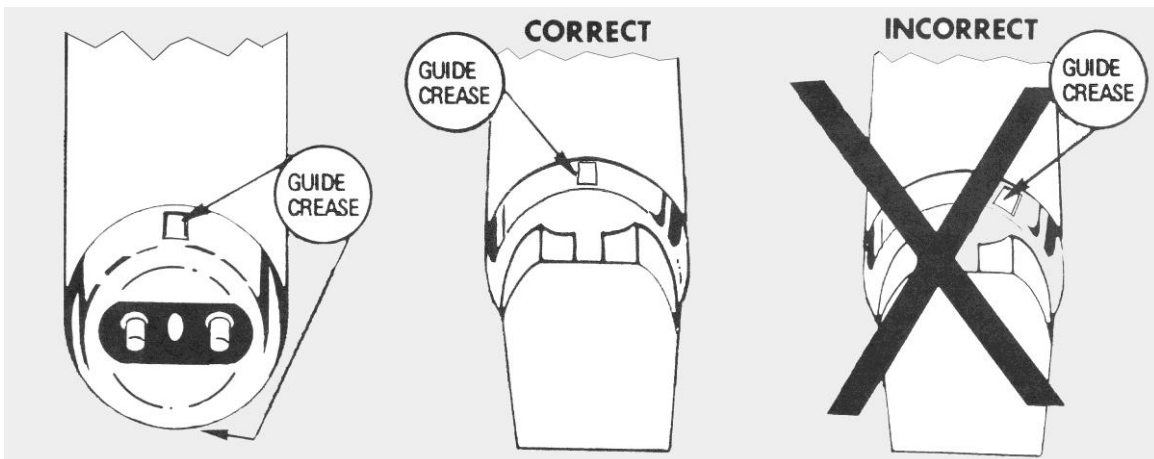

Watt-Saver fluorescent lamps must be operated in an ambient temperature of 60° F minimum.